

of digital X-ray images

Image Quality Indicator for evaluating Total Images Unsharpness

The Duplex IQI is used in many X-ray applications, especially in digital X-ray. Designed for evaluating total image unsharpness of films and additionally basic spatial resolution of digital images according to EN 13068 (Radioscopy), EN 14784 and ISO 16371 (CR - Computed Radiography with imaging plates), ISO 17636-2 (digital radiology of welds - flat panel detectors) or ASTM E 2597 (characterization of digital detector arrays) and ASTM E 2737 (DR Duplex Plate Phantom). ASTM E 2903 describes the Duplex Wire Type IQI application for focal spot size measurements of micro focus X-Ray tubes.

Image valuation with Duplex Wire Type IQI


In radiography the wire pair with largest diameter d has to be identified, which cannot be separated visually. The radiographic film may be magnified up to 4X.

In digital radiology the separation between wires (Dip) is evaluated. The wire pair with largest d, showing Dip less than 20 percent of the wire pair contrast, identifies total image unsharpness (U = 2d) and basic spatial resolution (SRb = d) of digital image.



_			. •	•					
•	n	Δ	cı	п	റാ	п	റ	n.	
J	μ	·	·	ш	ca	·	v		

- Duplex IQI consists of 13 or 15 wire pairs from 1D to 13D or 15D
- material for wires 1D to 3D is tungsten and for wires 4D to 15D is platinum
- distance between wires of each wire pair equals exactly diameter of wires
- wires are casted in a transparent, resistant and dimensional stable plastic
- standard and serial number are indelible casted and shown on each image
- design-type test for Duplex IQI is in process at BAM / Berlin

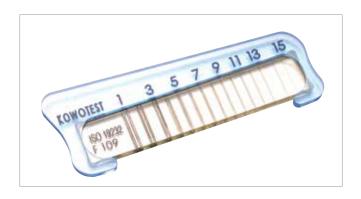

DD	UT (mm)	SRb (mm)	LP (1/mm)	d (mm)
D 1	1,600	0,800	0,625	0,800
D 2	1,260	0,630	0,790	0,630
D 3	1,000	0,500	1,000	0,500
D 4	0,800	0,400	1,250	0,400
D 5	0,640	0,320	1,560	0,320
D 6	0,500	0,250	2,000	0,250
D 7	0,400	0,200	2,500	0,200
D 8	0,320	0,160	3,130	0,160
D 9	0,260	0,130	3,850	0,130
D 10	0,200	0,100	5,000	0,100
D 11	0,160	0,080	6,250	0,080
D 12	0,130	0,063	7,690	0,063
D 13	0,100	0,050	10,000	0,050
D 14	0,080	0,040	12,500	0,040
D 15	0,064	0,032	15,600	0,032

DD Duplex Wire Number

UT Corresponding Unsharpness

SRb Corresponding Basic Spatial Resolution

Corresponding Line Pair Value

Wire Diameter and Spacing

Scope of supply:

Duplex Wire Type IQI in wooden box with Instructions, Declaration of Conformity according to ISO/IEC 17050-1 and individual Test Certificate according to ASTM E 2002, ISO 19232-5 with all relevant measurements

Duplex Wire Type IQI - 13D with wire pairs from 1D to 13D Article no. 11 00155


Duplex Wire Type IQI - 15D HiRes with wire pairs from 1D to 15D Article no. 11 00160

Duplex IQI Bracket

for easy wire pair identification for 13D

Article no. 11 00156

for easy wire pair identification for 15D









深圳为尔康科技有限公司

曾生:13632925349 QQ:274798107

电话: 0755-28896837

地址:深圳市龙岗区沙平北路111号吉茂大厦608A

网址: www.medicalqc.com